
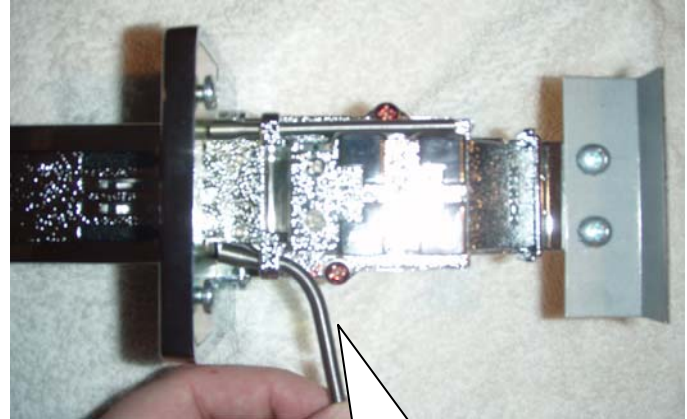


Removing coin or item jam from coin shoot.


**VERY IMPORTANT !!!** There is only two screws that can be removed. Follow instructions closely. See Picture below on **SCREWS THAT SHOULD NOT BE REMOVED**.

This picture shows top of coin shoot looking down. Unhook return spring for easier screw access.

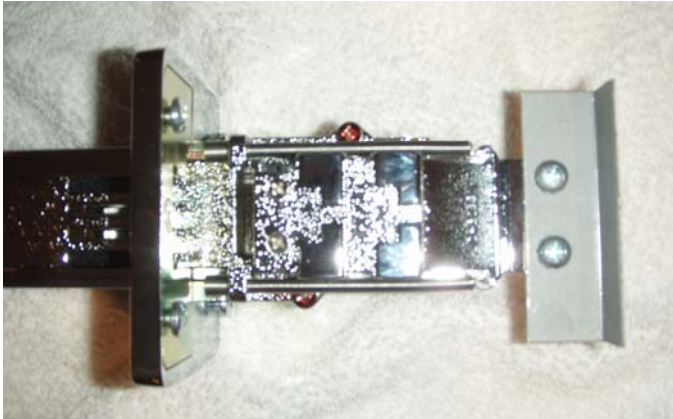


Remove top two screws. Do not lose small washer with screws.

Unhook spring for easier access to screws

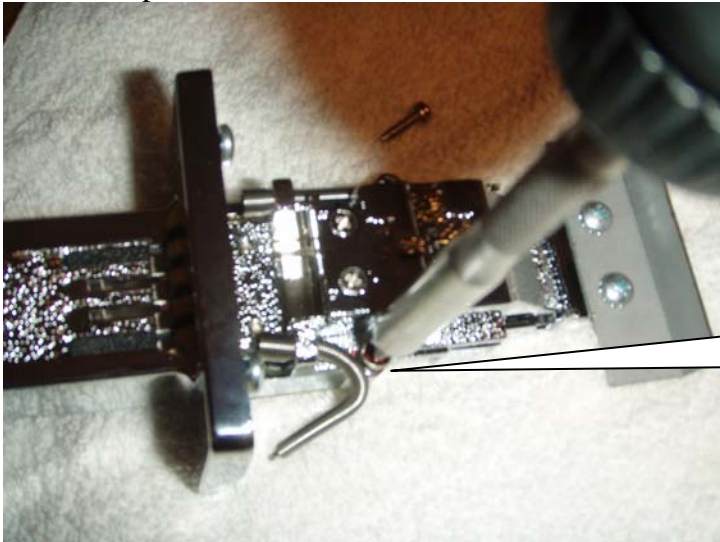



Remove top two screws. Do not lose tiny washers. You will need when reinstalling top.

Picture shows top of coin shoot off. Remove any jammed items.

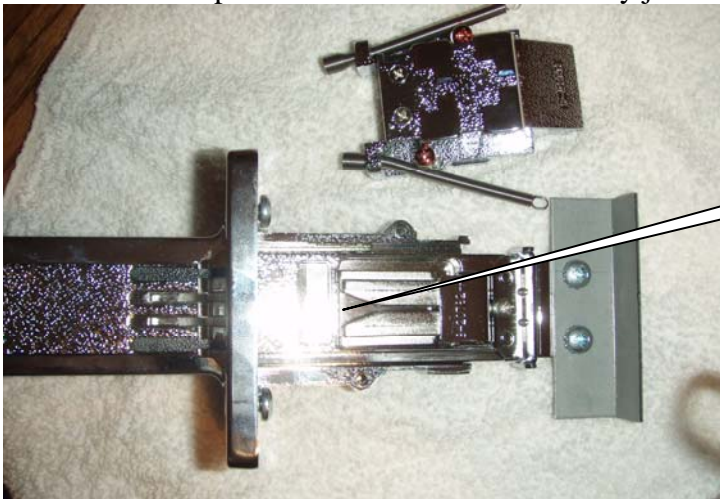

Jammed item will be in this area.


When replacing top. Make sure top is snug without any gaps before screwing down.

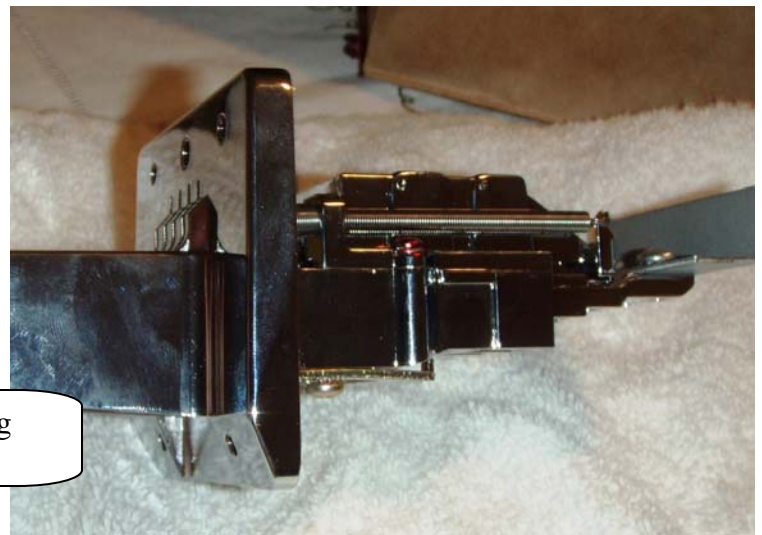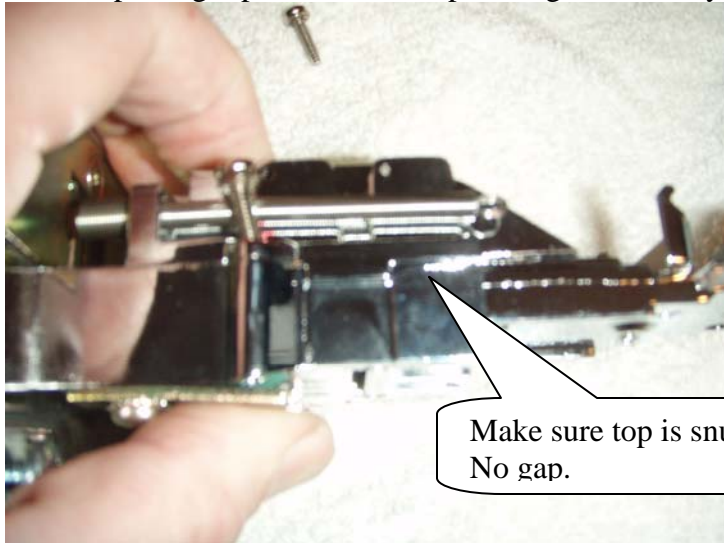


Make sure top is snug  
No gap.

## NEVER REMOVE SCREWS ON BOTTOM OF COIN SHOOT

Picture shows coin shoot bottom (upside down)

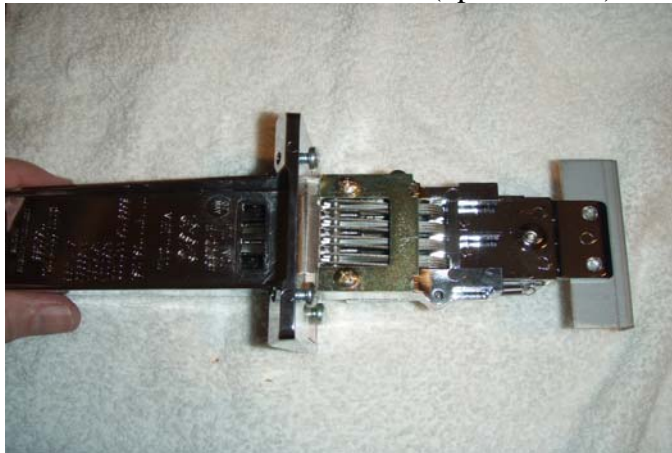

DO NOT REMOVE THESE SCREWS FOR ANY REASON.

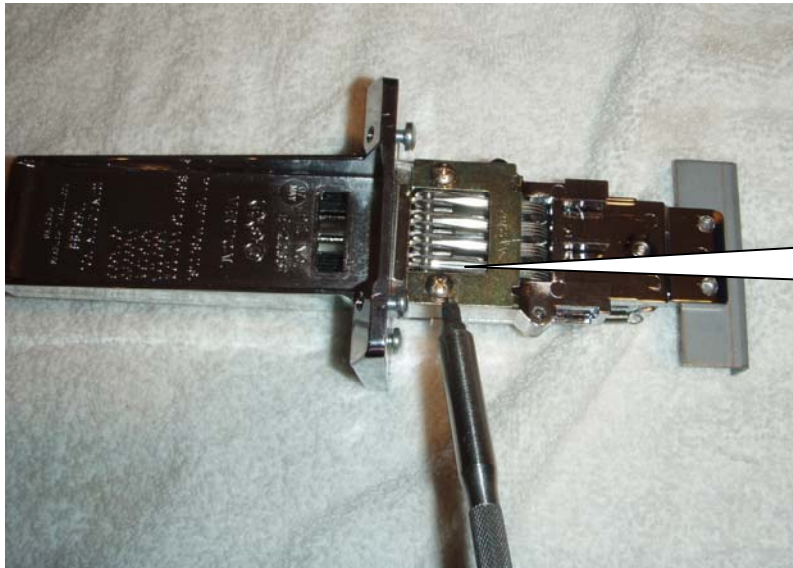

Very Very important that  
you DO NOT remove these  
screws. Everything will fall  
apart.